


ELECTRONIC SECURITY SAFE MANUAL USER

FOR DE SERIES

Dear valued customer,

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

CAUTION: Please do NOT keep emergency keys in your safe!

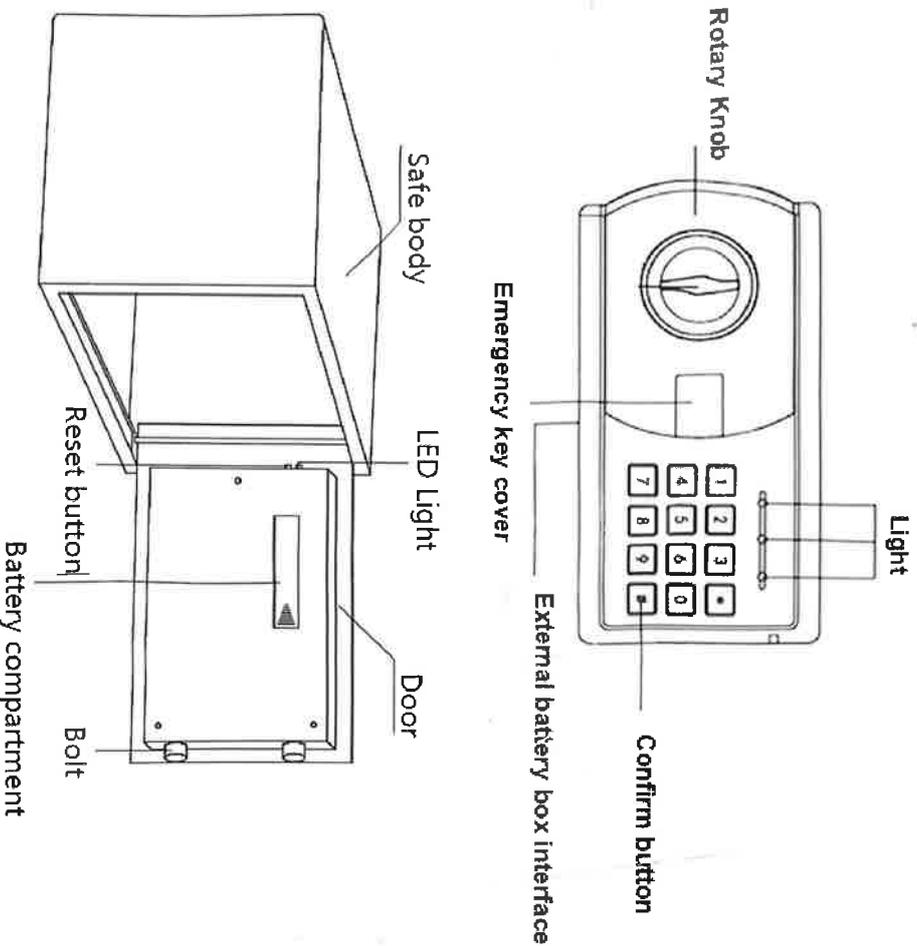

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key. The operation in details refers to "opening the safe with the emergency key".

1. Remove emergency lock cover, then insert the emergency key, and turn it count clockwise.
 2. Turn the knob clockwise to open the door.
- CAUTION:** Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

1. Open the door.
2. Insert 4x1.5V batteries into the battery compartment.
3. Under normal condition, if the red light turns on, it means the voltage is low and you should insert new batteries.

OPENING DOOR

1. Input your user's code (1 to 8 digits), each pressing results one buzzer beep and yellow light flashes
2. Press "#" button, the green light will turn on.
3. Rotate the knob clockwise and pull outwards within 6 seconds, the door is opened.

CAUTION: The user preset code 1234. Please input the user code again if the yellow light flashes with three buzzer beeps.

SETTING THE USER CODE

★NOTE: Factory default user code:1234

1. With the door open, press reset button on the back of door.
2. Input new code (1 to 8 digits), and press "#" button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
3. If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

SETTING MASTER CODE

★NOTE: Factory default master code:123456

1. Open the safe, input "0" twice and press reset button.
2. Input the new master code (1-8 digits), and press "#" button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
3. If the yellow light flashed three times, it means the new code is invalid and should operate again.

OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown, you can use the emergency key to open the safe.

1. Remove the cover of the emergency lock.
2. Insert the emergency key, turn it count clockwise, then turn the knob clockwise to open the door.

ALARM FUNCTION

1. Press “#” button with one buzzer beep, the yellow light turns on and system enters into alarm status. The safe will alarm when there is shock and lasting for 1 minute. Press the right code and the green light turns on. The alarm will stop and relieve alarm status and you can open the door.

MOUNTING METHOD

Fix the safe in the place which is not easy to move.

1. Drill holes for expansion bolts (or clamping screws) in the right place.
 2. Turn the expansion bolts counterclockwise to separate.
 3. Use the expansion bolts (or clamping screws) to secure the case to the wall.
 4. Make sure the case is mounted in place as required and then tighten all screws.
- CAUTION:** use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

